SIMWATCH SSW01

Warning: Watch band damage caused by excessive bending is not covered by the limited hardware warranty!

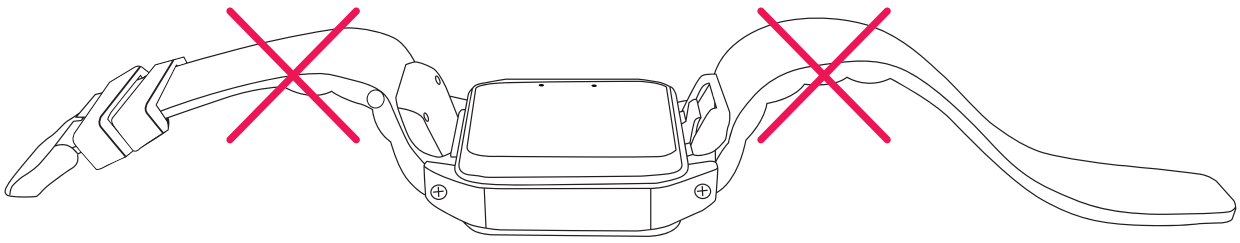

Smartwatch Overview

Overview of the Smartwatch

The SIMwatch 5 modelcontains the following components.

Keys and parts

- A On / off / end key
- B Loudspeaker
- C Camera
- D Touch screen
- E Microphone
- F OK / dial key
- G Micro USB port
- H Stylus

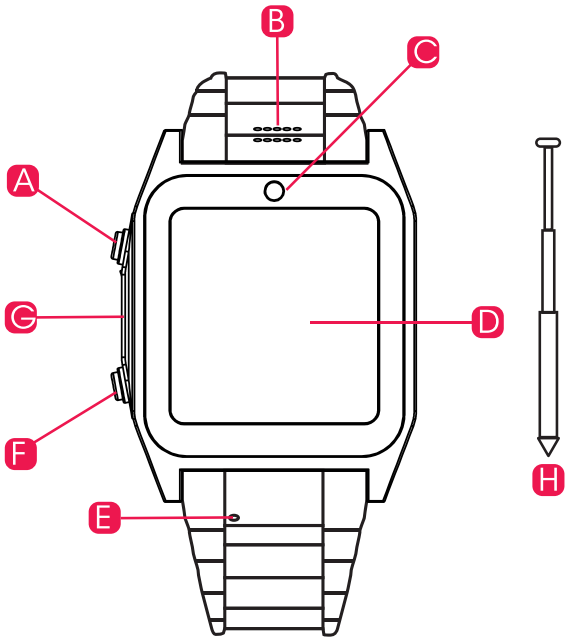

The telescoping stylus is stored in the watchband, just above the screen.

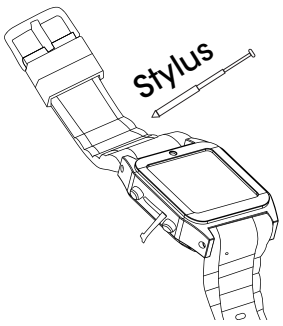

Features List

- Fully functioning phone
- SMS and MMS capability
- Internet connection, through WAP 1.2.1
- Two Way Communication with Smartphone
- MP3 / MP4 Player
- Front facing camera, with 3x zoom function
- Video recorder
- Task list
- Alarm clock
- Calculator
- Bluetooth capability
- Phone book for up to 500 numbers
- Call history
- Scratch resistant touch pad
- Micro SD card slot
- Vibrate function

- Audio recorder
- Voice recorder
- Image viewer
- File manager
- Organizer
- Multiple languages available

Watch Faces

Regular Watch Display

Default

Analog clock

Digital Watch Display

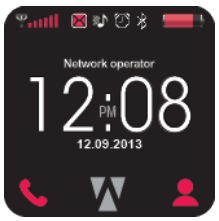

Signal strength

Alarm settings

Battery life

Date information

Links to telephone dialing pad, main menu and contact list

Smartwatch Features: Screen 1

Multimedia: camera, Image viewer, audio player, video player, and sound recording

Smartwatch Features: Screen 2

SMS

Smartwatch Features: Screen 3

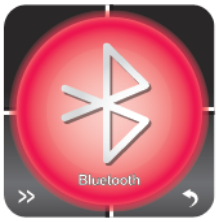

Bluetooth

Smartwatch Features: Screen 4

Two Way Communication

Smartwatch Features: Screen 5

Silent mode

Smartwatch Features: Screen 6

Organizer: File manager, calculator, tasks, alarm.

Profiles

Settings: pen calibration, phone settings, network settings, security settings, call settings, restore factory settings

Call History

Smartwatch Features: Screen 7

FM Radio

Phonebook

Calendar

Services: internet service and data

First Time Use

Insert a SIM Card

The Smartwatch allows you to store phone contact information on your phone itself or on a removable SIM card. To insert a SIM card into the Smartwatch, do the following:

1. Switch off the Smartwatch by pressing and holding the power button until the screen shuts off.

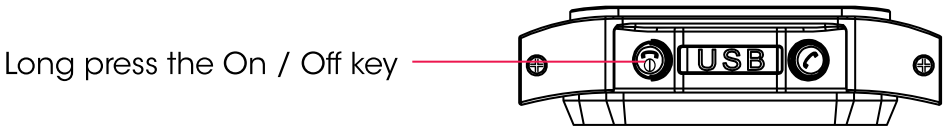

2. Turn the watch over and remove the back plate.
3. Open the larger of the two silver metal guards by gently lifting up on the right side.
4. Insert the SIM card into the slot.

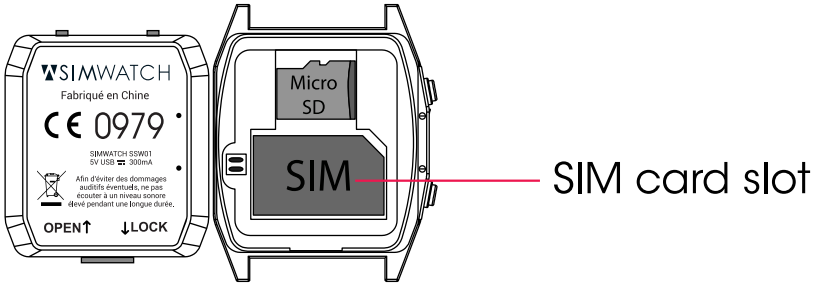

5. Flip down the silver metal cover.
6. Replace the back plate.

Insert a Micro SD Card

The Smartwatch allows you to store music, videos, audio recordings, and other data on your phone or on a removable micro SD card up to 16GB. To insert a micro SD card into the Smartwatch, do the following:

1. Switch off the Smartwatch by pressing and holding the power button until the screen goes dark.

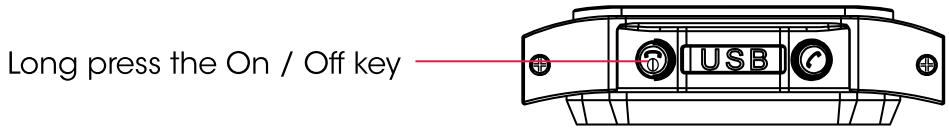

2. Turn the watch over and remove the back plate.
3. Open the smaller of the two silver metal guards by gently lifting up on the right side.
4. Insert the micro SD card into the slot.

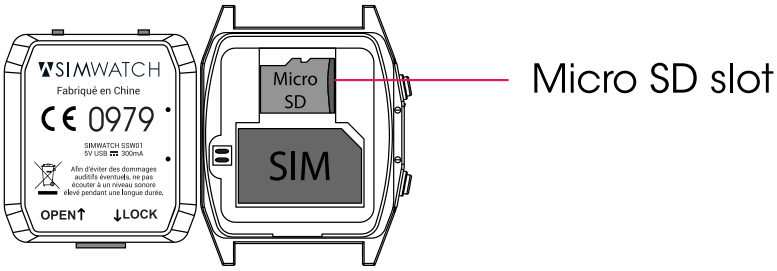

5. Flip down the silver metal cover.
6. Replace the back plate.

Note: Micro SD card is not included. Micro SD card is recommended to enjoy all the functions in theSmartwatch.

Charge the Battery

The Smartwatch digital display screen tells you how of a charge is left in the battery.

0% remaining

50% remaining

100% (Fully charged)

To charge the Smartwatch battery, do the following:

1. Open the hinge marked USB on the side of the watch.

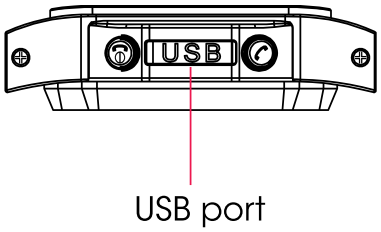

2. Insert the smaller end of the USB cable that came with the watch.
3. Insert the larger end of the cable into a USB port on your computer or laptop.

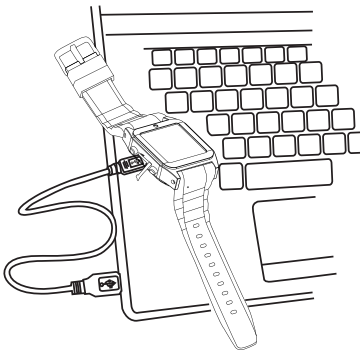

Turn Phone On/Off

To turn the phone on or off, press and hold the On/Off button on the side of the watch.

Long press the On / Off key

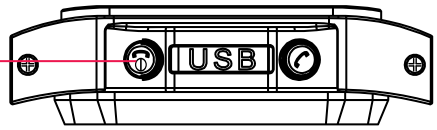

Calibrate the Touchscreen

In order for the touchscreen on your Smartwatch to work correctly, you must calibrate it before your initial use. To ensure the best performance of your Smartwatch, you should re-calibrate the touchscreen about every two weeks after that.

To calibrate the touch screen, do the following:

1. Using the Smartwatch stylus, tap the (Menu) button on the main digital screen.
2. Tap the>>(Forward) button in the lower left corner of the screen 4 times.
3. Tap the 'Settings' option in the bottom left corner of the screen.
4. Tap the 'Pen Calibration' option in the top left corner of the screen.
5. Follow the prompts that are displayed on the screen.

Calibration is complete when a green checkmark appears on the screen with the word 'Done' underneath it.

Watch Display

When you tap the default (analog) watch face, the digital watch face appears, displaying the following phone-related icons at the top:

Signal strength
New text message (SMS)
Vibrate and ring
Vibrate then ring
Vibrate only
Ring
Alarm On
Bluetooth On
Bluetooth connected
Headset inserted
Missed call
Battery strength

To access the interactive phone features of the Smartwatch, do the following:

Tap the button to access the telephone number pad to dial a phone number.

Tap the button to access your Contact list.

Tap the button to access all of the other features of the Smartwatch.

Smartwatch Features

Make and Manage Calls

Make a Call by Dialing a Number

To make a call, do the following:

1. Tap the default (analog) watch display.
2. Press the Dial button on the side of the Smartwatch, or the 'phone' icon in the lower left corner of the screen.

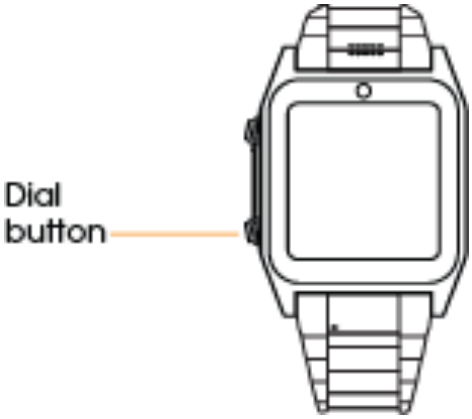

2. Tap out the telephone number you want to call.
3. Tap the green 'call' button in the top left corner of the screen to initiate the call.

Make a Call by Selecting a Contact

To make a call by selecting a contact, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Phone) button.
3. Tap the Contacts button in the center of the top row on the screen.
4. Tap the name of the contact you want to call.
5. In the menu that appears, tap 'Call' to call the contact.

Make a Call by Selecting a Recently Dialed Number

To make a call by selecting a recently dialed number, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Phone) button.
3. Tap the green 'call' button in the top left corner of the screen.

4. In the list of recently dialed numbers that appears, tap the name of the person you want to call.
5. In the menu that appears, tap 'Call'.

Answer a Call

To answer an incoming call, tap the 'Options' button that appears on the screen and the call will be connected automatically.

Reject an Incoming Call

To reject an incoming call, tap the 'Reject' button that appears on the screen as the person is calling.

End a Call

To hang up at the end of a call, press the 'End Call' button on the side of the Smartwatch.

Check Voicemail

When you miss a call and someone leaves a message on your Smartwatch, a "New voicemail" graphic will appear on the display screen. To check your voicemail, do the following:

1. Tap the 'New voicemail' graphic.
2. Tap the 'Back' button.
3. Tap the 'Back' button again.
4. Tap the (Phone) button.
5. Press and hold the 1 key on the keypad and the voicemail message will begin playing.

Note: To view the number keypad as the message is playing, tap the phone icon in the bottom center of the screen. With the keypad visible and the message playing, you can do any of the following:

- Tap 7 to delete the current message.
- Tap 9 to save it in the archives.
- Tap 4 to replay the message.
- Tap 5 to hear the envelope information for the message.
- Tap 6 to send a copy of the message to someone else with your remarks.

View Voicemail Call Details

To view details about a voicemail call, do the following:

1. Tap the 'New voicemail' graphic.
2. Tap the 'View' button.
3. Tap the name of the person who called.
4. Tap View to see the following information:
    - The type of call
    - The name of the caller
    - The calling number
    - The time and date of the call
    - The duration of the call
    - The total number of times the person called.

Adjust the Volume During a Call

To adjust the volume during a call, do the following:

1. Tap the 'Option' button.
2. In the menu that appears, tap the 'Volume' option.
3. Increase the volume by tapping the + button or decrease it by tapping the – button.

Manage Call Waiting

To manage call waiting, do the following:

1. Tap the 'Option' button.
2. In the menu that appears, tap the Hold 'single call' option.

Add a Phone Number to Your Blacklist

You can block calls from specific numbers by adding them to the blacklist on your phone. To add a number to your blacklist, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap (Phone) button.
3. Tap the green 'call' button in the top left corner of the screen.
4. In the list of recently dialed numbers that appears, tap the name of the person whose number you want to add to your blacklist.
5. In the menu that appears, tap 'Add to Blacklist'.
6. Tap the 'Yes' to confirm your decision.

Manage Contacts

All of the features listed in this section are available through the Contacts menu on the Smartwatch. To access the Contacts menu, do the following:

1. Tap the default (analog) watch display.
2. Tap the Contacts button in the lower right corner of the screen.

View Your Contact List

To view your Contacts List, do the following:

1. Tap the 'Contacts' menu.
2. On the Contacts screen that appears, tap the ∧ and ∨ buttons to scroll up and down through the list.

Add a Contact

To add a contact to your Contacts list, do the following:

1. Tap the 'Contacts' menu.
2. Tap the 'Add new contact' option at the top of the screen.
3. Enter the name of the contact.
5. Tap the ∨ button to go to #2,
6. Enter the number of the contact.
7. Tap the ∨ button to go to #3.

   Note: If you are importing the contact instead of entering it manually, skip Steps 3 to 5 and tap the ∨ button to go to #3.

8. (Optional) Enter the email address of the contact
9. Tap the ∨ button to go to #4,.
10. (Optional) Select a picture of the contact.
11. Tap the ∨ button to go to #5.
12. (Optional) Select the ringtone you want to associate with the new contact.
13. Tap the 'Options' button at the bottom right corner of the screen to input more information.
14. Tap 'Options' and then select'Save' to add the contact to the list.

Edit a Contact

To edit a contact's details in your Contacts list, do the following:

1. Tap the 'Contacts' menu.
2. Tap the name of the contact whose information you want to edit.
3. Select'Opitons' and then select'Edit' from the menu that appears.
4. Use the v button to modify the name of the contact, the contact's number,the contacts email address and/or the ringtone that accompanies their calls.
5. When you are done, tap the 'Options' button at the bottom right corner of the screen.
6. Tap 'Okay' and then tap 'Yes' to confirm that you want to save your changes.

Delete a Contact

To delete a contact from your Contacts list, do the following:

1. Tap the 'Contacts' menu.
2. Tap the name of the contact you want to delete.
3. Select 'Delete'from the menu that appears.
4. Tap'Yes' to confirm that you want to delete the contact.

Send a Text Message to a Contact

To send a text message to a contact via the Contacts screen, do the following:

1. Tap the 'Contacts' menu.
2. Tap the name of the contact you will be sending a text message to.
3. Tap the 'Send text message' option in the list that appears.
4. Use the stylus to compose your message.
5. Tap the 'Options' button and then click the name of the contact you want to send the text message to.

Send a Multimedia Message to a Contact

To send a multimedia message to a contact via the Contacts screen, do the following:

1. Tap the 'Contacts' menu.
2. Tap the name of the contact you will be sending a multimedia message to.
3. Tap the 'Send multimedia message' option in the list that appears.
4. Use the stylus to compose your message.
5. Tap the 'Options' button and then click the name of the contact you want to send the Multimedia Message to.

Send a Contact's Details

The Smartwatch allows you to send a contact's details to a contact as an SMS message or an MMS message or directly to Bluetooth device. To send the details, do the following:

1. Tap the Contacts menu.

2. Tap the name of the contact whose information you want to send.
3. Select 'Send contact' from the list that appears.
4. Select from one of the following options, then follow the prompts that appear:
   - As text message
   - As multimedia message
   - Via Bluetooth – If you select this option, you will be asked to confirm that your Bluetooth device is on. If the Smartwatch is unable to detect the device, a Search new device button will be displayed.

Add a Contact to Your Blacklist

To add a contact to your Blacklist, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact whose number you want to add to your blacklist.
3. Select 'Add to Blacklist' from the menu that appears.
4. Tap 'Yes' to confirm that you want to add the contact to the list.

Copy a Contact or All Contacts

To copy a single contact's details to your phone or to your SIM card, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact whose information you want to copy.
3. Tap 'Copy' from the list that appears.
4. Tap 'To phone' to copy the contact details to your phone.
5. Tap 'Yes' to confirm that you want to copy the contact.

To copy all of your contacts to your phone or to your SIM card, do the following:

1. Tap the Contacts option.
2. Tap the Options button.
3. Tap 'Phonebook settings' from the list that appears.
4. Tap 'Copy contacts' from the list that appears.
5. Tap either 'SIM to phone' or 'Phone to SIM'.
6. Tap 'OK'.
7. Tap 'Yes' to confirm that you want to copy all of your contacts.

Move a Contact or All Contacts

To move a single contact's details to your phone or to your SIM card, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact whose information you want to move.
3. Select 'Move' from the list that appears.
4. Tap 'Yes' to confirm that you want to move the contact.

To move all of your contacts to your phone or to your SIM card, do the following:

1. Tap the Contacts menu.

2. Tap the Options button.
3. Tap 'Phonebook settings' from the list that appears.
4. Tap 'Move contacts' from the list that appears.
5. Tap either 'SIM to phone' or 'Phone to SIM'.
6. Tap 'Yes' to confirm that you want to move all of your contacts.

Create a Caller Group

To create a caller group, do the following:

1. Tap the 'Contacts' menu.
2. Tap the 'Options' button.
3. Select 'Groups' from the list that appears.
4. Tap the 'Add new group' option.
5. Tap 'Group name'.
6. Use the stylus to type out the name of the caller group.
7. Tap the Options button.
8. Select 'Done' to save the new caller group.
9. Tap 'Yes' to confirm that you want to create the new caller group

Modify a Caller Group

To modify a caller group, do the following:

1. Tap the Contact option.
2. Tap the name of any contact in the list.
3. Select Caller groups from the list that appears.
4. Tap the name of the caller group you want to modify.
5. Select from the following options:
    - Tap 'View members' to view and add new members.
    - Tap'Delete' to delete the caller group.
    - Tap 'Delete all' to delete all caller groups.

Manage SMS

All of the features listed in this section are available through the SMS menu on the Smartwatch. To access the SMS menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >> (Forward) button in the lower left corner of the screen

   Tap the 'Messaging' menu that appears.

Compose an SMS Message

To create an SMS message, do the following:

1. Tap the 'Messaging' menu.
2. Tap the 'Write message' option in the top left corner of the screen.
3. Select 'Text Message'.

   TIP:Tap the "Option"key to change the input method. See Change the Input Method below for more details on this feature.
4. Compose the text message you want to send.
5. Tap the 'Options' button.
6. In the menu that appears, tap the 'Send to' option.
7. Enter the recipient's number manually or select it using the 'Add from Phonebook' option.
8. Tap the 'Options' button again.
9. Tap 'OK' to send the message.

Compose an MMS message

1. Tap the 'Messaging' menu.
2. Tap the 'Write message' option in the top left corner of the screen.
3. Compose the text message and insert the multimedia file you want to send.
4. Tap the 'Options' button.
5. In the menu that appears, tap the 'Send to' option.
6. Enter the recipient's number manually or select it using the 'Add from Phonebook' option.
7. Tap the 'Options' button again.
8. Tap 'OK' to send the message.

Warning: MMS and SMS will be saved in the Phone memory only.

Go to Your Inbox

To view your message inbox, do the following:

1. Tap the 'Messaging' menu.
2. Tap the 'Inbox' option.

View and Manage Sent Messages

To view and manage your sent messages, do the following:

1. Tap the'Messaging' menu.
2. Tap the 'Sent messages' option in the bottom left corner of the screen.
3. Tap any message to access it.
4. Tap the 'Options' menu to access the following message-related options:
   - View
   - Reply
   - Call sender
   - Forward
   - Delete
   - Delete all

View Draft Messages

To view your draft messages, do the following:

1. Tap the'Messaging'menu.
2. Tap the Drafts option in the bottom right corner of the screen.

Change the Input Method

> Note: The following instructions explain how to change the input method for a specific SMS message as you are creating it. To change the default input method of the system, refer to the Settings section of this guide.

Changing the Input Method of an SMS/MMS message allows you to specify the language you want to create the message in, add numbers and symbols to the message, or write in all lowercase or all uppercase letters. To change the input method locally, do the following:

1. Tap the 'Messaging'menu.
2. Tap the 'Write message' option in the top left corner of the screen.
3. Tap the'Multimedia message' tab
4. Tap the 'Options' tab.
5. Tap the 'Input method' tab on the 3rd row
6. Choose the suitable Input method.

View & Edit Common Settings

To view and configure common settings, do the following:
1.Tap the'Messaging' menu.
2.Tap the >> (Forward) button.
3.Tap the 'SMS Settings' option in the top right corner of the screen.
4.Tap the 'Multimedia message'tab
5.In the menu that appears, tap the 'Common settings' option.
6.Tap the'Compose' tap to change the setting. You can have the following settings
-Slide time
-Creation mode: Warning, Restricted, Free
-Auto Signature: On/Off
-Signature setting
7.Tap the'Sending' tap to change the setting. You can have the following settings:
-Validity Period: 1hr, 6hr, 12hr, 1day, 1week, and maximum.
-Delivery Report: On/Off
-Read Report: On/Off
-Priority: Low, Medium, and High
-Delivery time: Immediate, 1 hr later, 12 hr later, and 24hr later.
-Send and save: On/Off
8.Tap the'Retrieval' tap to change the setting. You can have the following settings:
-Home network: Immediate, Deferred, and Rejective.

-Roaming: As home, Immediate, Deferred, and Rejective. Filters: Anonymous On/Off, Advertisement On/Off
-Read report: On request, send, and never send.
-Delivery report: On/Off

9.Preferred storage: Phone/ Memory card
10.Memory status: Phone/ Memory card
Turn on or turn off each of the following settings by tapping them and then tapping the On/Off button at the bottom of the screen:
- Delivery path report
-Reply path
-Save sent messages
-Save sent messages

View Memory Status

To view how much memory you have used on the phone and on your SIM card, do the following:

1. Tap the'Messaging'menu.
2. Tap the>> (Forward) button.
3. Tap the 'SMS Settings' option in the top right corner of the screen.
4. Tap the 'Multimedia message' tab
5. In the menu that appears, tap the 'Common settings' option.
6. In the menu that appears, tap the 'Memory status' option on the 5th row.
7. Tap the 'Phone' the screen will refresh and display the percent of your phone memory that is currently being used.
8. Tap the 'Memory card' the screen will refresh and display the percent of your memory card that is currently being used.
9. Click the Back button to exit the screen.

Select a Preferred Storage Location

To designate a preference of where to store your SMS data, do the following:

1. Tap the SMS menu.
2. Tap the>> (Forward) button.
3. Tap the SMS Settings option in the top right corner of the screen.
4. Tap the 'Multimedia message' tab
5. In the menu that appears, tap the 'Common settings' option.
6. In the menu that appears, tap the 'Preferred storage' option.
7. Tap either the SIM or the Phone radio button to designate where SMS data should be stored.
6. Click the OK button to save your choice.

Manage Call History

All of the features listed in this section are available through the Call history menu on the Smartwatch. To access the Call history menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >> (Forward) button in the lower left corner of the screen 5 times

   The Call history menu appears in the bottom right corner of the screen.

View Missed Calls

To view a list of your missed calls, do the following:

1. Tap the 'Call history' menu.
2. Tap the 'Missed calls' option on the 1st row.

View Dialled Calls

To view a list of your dialled calls, do the following:

1. Tap the 'Call history' menu
2. Tap the 'Dialled calls' option on the 2nd row to view dialled calls

View Received Calls

1. Tap the 'Call history' menu
2. Tap the 'Received calls' option on the 3rd row to view Received Calls

Delete Call Logs

To delete your call logs, do the following:

1. Tap the 'Call history' menu.
2. Tap the 'Delete call logs' option on the 4rd row.
3. Tap the call log you want to delete—Dialled, Missed, or Received—or tap 'Allcalls' to erase all logs.

View Call Timers

To view timers for the calls that have been made and received on your Smartwatch, do the following:

1. Tap the Call history menu.
2. Tap the'Call timers' on the 5th row
3. A popup screen that displays the related times:
    - Last call
    - Dialled calls
    - Received calls

    TIP: Tap the 'Reset all' under the page after pressing 'Options' bottom on the bottom left corner to set all of the timers to zero.

Call Costs

This function needs Service Provider support in order to work correctly. Your Service Provider can also provide you with the PIN2 password you need, to complete these steps. To view the costs for the calls that have been made and received on your Smartwatch, do the following:

1. Tap the 'Call history' menu.
2. Tap the 'Call cost' option on the 6th row.
3. Tap any of the following options to view a popup screen that displays the related times:
    - Last call cost
    - Total cost
5. (Optional) Tap the Reset cost option and enter your PIN2 password to reset the costs listed on the screen.
6. (Optional) Tap the Max cost option and enter your PIN2 password to set a maximum amount you are willing to pay for calls on the phone.
7. (Optional) Tap the Price per unit option and enter your PIN2 password to view the price per unit you are paying for each call.
8. Tap Back to save your changes.

Text Message Counters

To view the total number of text messages you have sent and received, do the following:

1. Tap the Call history menu.
2. Tap the>> (Forward) button.
3. Tap the Text msg option in the bottom left corner of the screen.
4. Tap the Sent option to view a popup screen that lists the total number of messages that have been sent from the phone.
5. Tap the Received option to view a popup screen that lists the total number of message that have been received by the phone.
6. (Optional) Tap the Reset button at the bottom of the screen to reset the counter for whichever option – Sent or Received – is currently selected.
7. Tap the Back button to exit the screen.

GPRS Counters

To view the total number of GPRS data you have sent and received, do the following:

1. Tap the 'Call history' menu.
2. Tap the 'GPRS counter' option on the last row by swipe upward.
3. Tap the 'Last sent' option to view a popup screen that lists the volume of data that was sent from the phone in the last message.
4. Tap the 'Last received' option to view a popup screen that lists the volume of data that was received by the phone in the last message.
5. Tap the 'All sent' option to view a popup screen that lists the total volume of data that has been sent from the phone.
6. Tap the 'All received' option to view a popup screen that lists the total volume of data that has been received by the phone.
7. (Optional) Tap the 'Reset counter' button at the bottom of the screen to reset all of the GPRS counters.
8. Tap the 'Back' button to exit the screen.

Manage Silent Setting

To activate or deactivate the silent mode setting for your Smartwatch, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >>(Forward) button in the bottom left corner of the screen4 times.
4. Tap the Silent menu that appears.
5. If the phone was in general mode, a Silent mode activated notification will appear.

   If the phone was in silent mode, a General mode activated notification will appear.

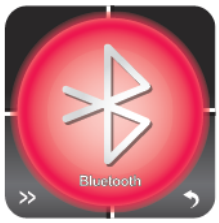

Manage Bluetooth

All of the features listed in this section are available through the Bluetooth menu on the Smartwatch. To access the Bluetooth menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >> (Forward) button in the bottom left corner of the screen2 times.

   Tap the Bluetooth menu that appears.

Turn On/Off Power

To activate/deactivate the Bluetooth feature, do the following

1. Tap the Bluetooth menu.
2. Tap the 'Power' button once on the top row of the screen to switch on Bluetooth. An [on] indication tap will appear on the right side of the row.
3. Tap the 'Power' button again on the top row of the screen to switch off Bluetooth. An [off] indication tap will appear on the right side of the row.

Turn On/Off Smartwatch Visibility to Bluetooth Devices

To make the Smartwatch visible to Bluetooth devices, do the following

1. Tap the Bluetooth menu.
2. Tap the 'Visibility' button once on the 2nd row of the screen to be visible. An [on] indication tap will appear on the right side of the row.
3. Tap the 'Visibility' button again on the 2nd row of the screen to be invisible. An [off] indication tap will appear on the right side of the row.

View my device

To search for a Bluetooth device in the vicinity of the Smartwatch, do the following

1. Tap the Bluetooth menu.
2. Tap the 'My device' button on the 3rd row of the screen.

   Note: If your Bluetooth device has not yet been paired with the Smartwatch, tap the Search new device option to locate it.

Search

To search for a Bluetooth device in the vicinity of the Smartwatch, do the following

1. Tap the Bluetooth menu.
2. Tap the 'My device' button on the 4th row of the screen.
3. Tap the 'Search audio device' button to search for Bluetooth device nearby.

Assign a Name to Your Bluetooth Device

To associate a name with the Bluetooth device, do the following

1. Tap the Bluetooth menu.
2. Tap the 'My name' buttom on the 5th row of the screen
3. Enter the name you want to use to identify the Bluetooth.
4. Tap the downward arrows bottom on the bottom left corner on the keyboard when finish.
5. Tap the 'Options' button.
6. Tap the Done option in the menu that appears.

Advanced

The Smartwatch also provides 3 advanced Bluetooth features, all of which can be accessed by doing the following:

1. Tap the 'Bluetooth' menu.
2. Tap the 'Advanced' option on the 6th row of the screen.

Advanced Option 1: Audio path

The 'Audio path' option allows you to designate where you want audio path information stored. The two options are:

- Leave in phone
- Forward to Bluetooth headset

Advanced Option 2: Storage

The 'Storage' option allows you to designate where you want Bluetooth data to be stored. The three options are:

- Phone
- Memory card
- Always ask

Advanced Option 3: My address

The My address option displays the Smartwatch's network address, which is used by your Bluetooth device when pairing up.

Set up Two-Way Communication

All of the features listed in this section are available through the Bluetooth menu on the Smartwatch. To access the Bluetooth menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >> (Forward) button in the bottom left corner of the screen 3 times.

Tap the Bluetooth menu that appears.

Turn On/Off Power

To activate/deactivatethe Bluetooth Companion powerfeature, do the following

1. Tap the 'Two Way Com.' menu.
2. Tap the 'Bluetooth Companion Power' button once on the 1st row of the screen to switch on the Bluetooth Companion Power'. An [on] indication tap will appear on the right side of the row.
3. Tap 'Bluetooth Companion Power' button again on the 1st row of the screen to switch off the Bluetooth Companion Power'. An [off] indication tap will appear on the right side of the row.

Turn On/Off Smartwatch Visibility to Smartphone

To make the Smartwatch visible to Bluetooth devices, do the following

1. Tap the 'Two Way Com.' menu.
2. Tap the 'Visibility' button once on the 2nd row of the screen to be visible. An [on] indication tap will appear on the right side of the row.
3. Tap the 'Visibility' button again on the 2nd row of the screen to be invisible. An [off] indication tap will appear on the right side of the row.

Set up Two-Way Communication with your smartphone

To connect the smartwatch to your smartphone through two-way communication do the following

1. Switch 'Bluetooth Companion Power' on
2. Switch 'visibility' on
3. Go back to the 'Bluetooth' menu. (On the digital watch display that appears, tap the (Menu) button.Tap the >> (Forward) button in the bottom left corner of the screen 2 times.)

4. Tap the 'Search audio device' button on the 4th row of the screen. Select 'Burg2way' and wait for choose 'pair' bottom appears on the bottom left corner. Tap the 'Pair' bottom
5. Type in your chosen passcode which matches with the passcode
6. You are now successfully connected.

Receive a call through Two-Way Communication

When you receive a call it will appear on both your smartphone and your Smartwatch.

You can answer the call with either your Smartwatch or your smartphone.

During the call you can change settings such as volume.

Make a call through Two-Way Communication

To make a call through Two-Way Communication do the following.

1. Go to 'phone'
2. Insert a number and select 'call'
3. You will get two options:
   - SIM call
   - Bluetooth call
4. Select 'Bluetooth call', now you will make a call through the Smartwatch using the SIM card in your mobile phone.

Send and receive messages through Two-Way Communication

To send and receive messages through Two-Way Communication you need to install the APK application on your smartphone.

1. Extract the .rar file to your computer
2. Connect your smartphone to the computer through USB
3. Copy the extracted .apk file to your smartphone
4. Deconnect the smartphone and computer
5. Install the APK application on your smartphone
6. The application is called Reacher and will run on the background
7. You can now send and receive messages on your watch.

Manage Multimedia

Your Smartwatch comes with a built-in camera, video recorder, audio player, video player, sound recorder, and image viewer, all of which are available through the Multimedia menu on the Smartwatch. To access the Multimedia menu, do the following:

1. Tap the default (analogue) watch display.
2. On the digital watch display that appears, tap the (Menu) button.

   The Multimedia menu appears.

Camera

Camera Options

The Smartwatch camera contains a wide range of settings you can use to create high-quality photographs. To access these settings, open the camera and tap the (Options) icon in the bottom left corner of the view finder. The following table explains each of the settings and the options available under each one.

Settings	Options Available
Camera settings	Shutter sound: Off, Sound 1, Sound 2, Sound 3 EV: Options of -2.0, -1.5. -1.0, -.05, 0, .05, 1.0, 1.5, 2.0 Contrast: High, Medium, Low Anti-flicker: 50hz or 60hz Delay timer: Off, 5 sec, 10 sec Cont. shot: Off, Continuous shot
Image settings	Image size: 240x320, 80x60, 160x120, 320x240, 640x480 Image quality: Low, Normal, Good
White balance	Auto, Daylight, Tungsten, Fluorescent, Cloudy, Incandescent
Scene mode	Auto or Night
Effect settings	Normal, Grayscale, Sepia, Sepia green, Sepia blue, Color invert

Take Photos

To take photos with your Smartwatch, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the 'Camera option' in the top left corner of the screen.
3. With the camera view finder displayed, point the camera at the item you want to photograph and press the (Camera) icon in the bottom center of the screen.

   The camera will take the photo and store it automatically on your phone or on your memory card, depending on your camera settings.

4. To view your photos, refer to the View Photos section below.

View Photos

To view photos you have taken, do the following:

1. Tap the Multimedia menu.
2. Tap the 'Camera' option in the top left corner of the screen.
3. Tap the (Options) icon in the bottom left corner of the screen.
4. Tap the Photos option in the menu and all of your photos will appear in a list.

Note: If you do not see your photos listed on the screen, they might be stored on at an alternate storage location on your phone. Refer to the Switch Storage Source instructions below for information on how to access files stored on your phone or on a memory card.

Switch Storage Source

You can only switch storage locations if you have a memory card (Micro SD card) inserted in your phone. To change the location where your photos are stored on the phone, do the following:

1. Tap the Multimedia menu.
2. Tap the Camera option in the top left corner of the screen.
3. Tap the (Options) icon in the bottom left corner of the screen.
4. Tap the 'Advanced setting' option on the rightend of the menu.
5. Tap the 'Storage' option.
6. Tap either Phone or Memory card, depending on where you want your photos stored.

   Note: If you do not have a memory card (Micro SD) card inserted in your phone, the only option you will see in the list is Phone.

6. Tap 'OK' on the bottom left corner to save your changes.

Restore Default Settings

To restore the default camera settings, do the following:

1. Tap the Multimedia menu.
2. Tap the Camera option in the top left corner of the screen.
3. Tap the (Options) icon in the bottom left corner of the screen.

4. Tap the 'Advanced setting' option on the right end of the menu.
5. Tap the 'Restore default' option on the right end of the menu that appears.
6. Tap 'Yes' to confirm that you want to restore the default settings.

Video Recorder

Video Recorder Options

The Smartwatch video recorder contains a wide range of settings you can use to record videos. To access these settings, open the video recorder and tap the (Options) icon in the bottom left corner of the view finder. The following table explains each of the settings and the options available under each one.

Settings	Options Available
Camcorder settings	EV: Options of -2.0, -1.5. -1.0, -.05, 0, .05, 1.0, 1.5, 2.0 Night mode: On or Off Anti-flicker: 50hz or 60hz
Video settings	Video quality: Low, Normal, Good
White balance	Auto, Daylight, Tungsten, Fluorescent, Cloudy, Incandescent
Effect settings	Normal, Grayscale, Sepia, Sepia green, Sepia blue, Color invert

View Videos

Videos are not viewed through the Video recorder option on the Smartwatch; they are viewed through the Video player option. Refer to the Video Player section below for more details on how to watch the videos you have taken.

Take Videos

To take videos with your Smartwatch, do the following:

To view photos you have taken, do the following:

1. Tap the Multimedia menu.
2. Tap the 'Camera' option in the top left corner of the screen.
3. Tap the (Options) icon in the bottom left corner of the screen.
4. Tap the 'Switch to' option in the menu.
5. Tap the 'Video recorder' option to activate the video recorder.
6. With the camcorder view finder displayed, point the lens at the item you want to record and press the (Video) icon in the bottom centre of the screen.

   The camera will start to record video.

7. To pause the recording, tap the (Pause) icon in the bottom center of the screen.
8. To stop recording, tap the (Stop) icon in the bottom right corner of the screen.
9. Tap 'Yes' to save the video you just recorded or No to erase it.
10. To view your videos, refer to the Video Player section below.

Switch Storage Source

You can only switch storage locations if you have a memory card (Micro SD card) inserted in your phone. To change the location where your photos are stored on the phone, do the following:

1. Tap the Multimedia menu.
2. Tap the Camera option in the top left corner of the screen.
3. Tap the (Options) icon in the bottom left corner of the screen.
4. Tap the 'Advanced setting' option on the right end of the menu.
5. Tap the 'Storage' option.
6. Tap either Phone or Memory card, depending on where you want your photos stored.

   Note: If you do not have a memory card (Micro SD) card inserted in your phone, the only option you will see in the list is Phone.
7. Tap 'OK' on the bottom left corner to save your changes.

Restore Default Settings

To restore the default camera settings, do the following:

1. Tap the Multimedia menu.
2. Tap the Camera option in the top left corner of the screen.
3. Tap the (Options) icon in the bottom left corner of the screen.
4. Tap the 'Advanced setting' option on the right end of the menu.
5. Tap the 'Restore default' option on the right end of the menu that appears.
6. Tap 'Yes' to confirm that you want to restore the default settings.

Audio Player

The Smartwatch audio player allows you to play MP3s and MP4s that are stored directly on yourSmartwatch or on a MicroSD (memory) card that you have inserted into the Smartwatch.

Create and Configure the Audio Player List

The first time you access the audio player, the play list will be empty. To add files to the list, do the following:

1. Tap the 'Multimedia' menu.

2. Tap the 'Audio player' option in the bottom left corner of the screen.
3. Tap the List button.
4. Tap the Options button.

Note: Steps 5 through 13 below only need to be done the first time you create a list or whenever you want to recreate a brand new list from scratch. If you simply want to add a file to the existing list, jump to Step 14.

5. Tap the Settings button.
6. Tap the Player settings button.
7. In the Pre. playlist field, select the location where the audio files are stored: Phone or Memory card.
   IMPORTANT: Make sure the List auto gen. field on the same screen is set to Off, otherwise you will not be able to access your files.
8. (Optional) Designate whether you want the files in this list to repeat: Off or On.
9. (Optional) Designate whether you want the files in this list to play in shuffle mode: Off or On.
10. Tap 'OK' when you are done.
11. Tap 'Back'.
12. Tap 'Options'.
13. Tap 'Add'.
14. In the list of audio files that appears, tap the names of each file you want to add to the audio player list.

    As soon as each file is done added to the list, a popup screen will appear with the word Done on it.

16. When you have finished adding files, tap 'Back'.
17. Tap 'Back' again.

    The screen will then display the list of all available audio files you can play.

Play an Audio File

To play an audio file, do the following:

1. Tap the Multimedia menu.
2. Tap the Audio player option in the bottom left corner of the screen.
3. Tap the List button.
4. Tap the name of the audio file that you want to listen to.
5. In the list that appears, tap 'Play'.

   The file will begin to play. When the song is finished, the Audio Player will automatically play the next file in the list or a random file if shuffle mode is turned on.

Play All Audio Files

To play all audio files in a list, do the following:

1. Tap the Multimedia menu.
2. Tap the Audio player option in the bottom left corner of the screen.
3. Tap the List button.
4. Tap the name of the first audio file in the list.

5. In the list that appears, tap 'Play'.

   The file will begin to play automatically, followed by all of the other songs in the list.

View Details of an Audio File

To view the details of an audio file, do the following:

1. Tap the Multimedia menu.
2. Tap the Audio player option in the bottom left corner of the screen.
3. Tap the List button.
4. Tap the name of the audio file whose details you to view.
5. In the list that appears, tap 'Details'.
6. The screen that appears lists the following information about the file:
   - Size
   - Time (length of the song)
   - Title
   - Artist

Video Player

The Smartwatch video player displays a list of all videos stored on your phone or on a MicroSD memory card you inserted into the phone. The video player allows you to play, send, rename, delete, and sort your videos using a single menu.

Play a Video

To play a video, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the 'Video player' option in the bottom right corner of the screen.
3. In the list of videos that appears, tap the one that you want to watch.
4. Tap the 'Play' option.
5. On the video screen that opens, tap the 'Play' button.

Send a Video

To send a video, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the 'Video player' option in the bottom right corner of the screen.
3. In the list of videos that appears, tap the one that you want to send.
4. Tap the 'Send' option.
5. In the list that appears, tap one of the following options: As 'multimedia message' or Via 'Bluetooth'.
6. Follow the prompts to create the multimedia or Bluetooth message.

Rename a Video

To rename a video, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the'Video player' option in the bottom right corner of the screen.
3. In the list of videos that appears, tap the one that you want to rename.
4. Tap the 'Options' bottom.
5. Tap the 'Rename' option.
6. Use the letter pad that appears to type out a new name for the video.
7. When you are finished, tap the Options button.
8. Tap 'Done' to save the new name.

Delete a Single Video

To delete a single video, do the following:

1. Tap the Multimedia menu.
2. Tap the Video player option in the bottom right corner of the screen.
3. In the list of videos that appears, tap the one that you want to delete.
4. Tap 'Yes' to confirm that you want to delete the video.

Delete All Videos

To delete all videos in the your, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the 'Video player' option in the bottom right corner of the screen.
3. Tap the 'Options' button in the bottom left corner of the screen.
4. Tap the 'Delete' all files button.
5. Tap 'Yes' to confirm that you want to delete all of the videos in the list.

Sort Your Video List

To sort the videos in your list, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the 'Video player' option in the bottom right corner of the screen.
3. Tap the 'Options' button in the bottom left corner of the screen.
4. Tap the 'Sort by' button.
5. Select from one of the following options as your sort criteria:
    - Name – Sorts your videos alphabetically.
    - Type – Sorts your videos based on the format of the video. (The default format is .3gp.)
    - Time – Sorts by the time and date each video was created.
    - Size – Sorts by the file size of each video.
6. Tap the 'Select' button to sort your videos.
7.

Switch Storage Source

You can only switch storage locations if you have a memory card (Micro SD card) inserted in your phone. To change the location where your videos are stored on the phone, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the 'Video player' option in the bottom right corner of the screen.
3. Tap the'Options' button in the bottom left corner of the screen.
4. Tap the 'Storage' button on the 6th row.

5. Tap either Phone or Memory card, depending on where you want your videos stored.

   Note: If you do not have a memory card (Micro SD) card inserted in your phone, the only option you will see in the list is Phone.

6. Tap 'OK' to save your changes.

Sound Recorder

The Smartwatch sound recorder allows you to make audio recordings and store them on the phone or on your memory card.

Create a Sound Recording

To create a sound recording, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Sound recorder' option in the top left corner of the screen.
4. Tap the blue Record button near the bottom of the screen.
5. (Optional) Tap the Pause button at any time to pause the recording.
6. Tap the Stop button when you are finished recording and the video will be save automatically.

Send a Sound Recording

To send a sound recording, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Sound recorder' option in the top left corner of the screen.
4. Tap the 'Options' button.
5. Tap either the New record option or the List option in order to create or locate the file you want to send.
6. When you have created/located the file, tap the 'Send' option.
7. In the list that appears, tap one of the following options: As multimedia message or Via Bluetooth.
8. Follow the prompts to create the multimedia or Bluetooth message.

View Your List of Sound Recordings

To view your list of sound recordings, do the following:

1. Tap the Multimedia menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Sound recorder' option in the top left corner of the screen.
4. Tap the 'Options' button in the bottom left corner of the screen.
5. In the menu that appears, tap the 'List' option.

Delete a Sound Recording

To delete a sound recording, do the following:

1. Tap the'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Sound' recorder option in the top left corner of the screen.
4. Tap the 'Options' button in the bottom left corner of the screen.
5. In the menu that appears, tap the 'List' option.
6. In the list of sound recordings that appears, tap the one that you want to delete.
7. In the menu that appears, tap the 'Delete' option.
8. Tap the 'Yes button to confirm that you want to delete the recording.

Switch Audio Quality

To switch the default file format of your sound recordings, do the following:

1. Tap the Multimedia menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the Sound recorder option in the top left corner of the screen.
4. Tap the Options button in the bottom left corner of the screen.
5. Tap the 'Settings' option.
6. You can choose between 'Low' and 'High' audio quality.
7. Tap OK to save your changes.

Switch Storage Source

You can only switch storage locations if you have a memory card (Micro SD card) inserted in your phone. To change the location where your sound recordings are stored on the phone, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Sound recorder' option in the top left corner of the screen.
4. Tap the 'Options' button in the bottom left corner of the screen.
5. Tap the 'Settings' option.
6. In the Storage field, select either Phone or Memory card, depending on where you want your sound recordings stored.

   Note: If you do not have a memory card (Micro SD) card inserted in your phone, the only option you will see in the list is Phone.

7. Tap 'OK' to save your changes.

Image Viewer

The Smartwatch image viewer allows you to view and manage the photos you take with the Smartwatch camera.

View an Image

To view an image you have taken with your Smartwatch camera, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. Tap the 'thumbnail' of the image you want to view.
5. Tap anywhere on the image, a menu bar pops up.
6. Tap the circular arrow icon to rotate the picture 90 degrees.

View Image Information

To view information for any image you have taken with your Smartwatch camera, do the following:

1. Tap the Multimedia menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. Tap the 'thumbnail' of the image whose information you want to view.
5. Tap 'Option' on the bottom right corner.
6. Tap 'Image information' option on the 2th row to view extensive details about the image, including its resolution, width, height, and exposure time.

Change Image Display Style

To change the way images are displayed in the Image Viewer, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. Tap the Options button on the bottom right corner.
5. Tap the 'Browse style' option on the 3rd row.
6. Select from one of the following options: 'List style' or 'Matrix style'.
7. Tap 'OK' to save your changes.

Send an Image

To send an image, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. Tap the Options button on the bottom right corner.
5. Tap the 'Send' option on the 4th row.
6. In the list that appears, tap one of the following options: As multimedia message or Via Bluetooth.
7. Follow the prompts to create the multimedia or Bluetooth message.

Use Image

To use one of your images as a default image within the Smartwatch, do the following:

1. Tap the Multimedia menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.

4. Tap the image you want to use.
5. Tap the Options button on the bottom right corner.
6. Tap the 'Use as' option on the 5th row.
7. Select from the following list of uses for the image:
    - Wallpaper
    - Screen saver
    - Power on display
    - Power off display

7. Tap 'OK' to save your selection.

Rename an Image

To rename an image, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. In the list of images that appears, tap the one that you want to rename.
5. Tap the Options button on the bottom right corner.
6. Tap the 'Use as' option on the 6th row.
7. Use the letter pad that appears to type out a new name for the image.
8. When you are finished, tap the 'Options' button.
9. Tap 'Done' to save the new name.

Delete an Image

To delete a single image, do the following:

1. Tap the Multimedia menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the Image viewer option in the top right corner of the screen.
4. In the list of images that appears, tap the name of the image you want to delete.
5. Tap the Options button on the bottom right corner.
6. Tap the 'Use as' option on the 7th row.
7. Tap 'Yes' to confirm that you want to delete the image.

Sort Images

To sort the images in your list, do the following:

1. Tap the Multimedia menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. Tap the Options button in the bottom left corner of the screen.
5. In the menu that appears, tap the Sort by option on the 8th row.
6. Select from any of the following options as your sort criteria:
    - Name – Sorts your images alphabetically.
    - Type – Sorts your images based on the format.
    - Time – Sorts by the time and date each image was taken.

- Size – Sorts by the file size of each image.

7. Tap the 'Select' button to sort the image list.

Switch Storage Source

You can only switch storage locations if you have a memory card (Micro SD card) inserted in your phone. To change the location where your sound recordings are stored on the phone, do the following:

1. Tap the 'Multimedia' menu.
2. Tap the >> (Forward) button in the bottom left corner of the screen.
3. Tap the 'Image viewer' option in the top right corner of the screen.
4. Tap the 'Options' button in the bottom left corner of the screen.
5. Tap the Storage option on the 9th row.
6. Select either 'Phone' or 'Memory card', depending on where you want your sound recordings stored.

   Note: If you do not have a memory card (Micro SD) card inserted in your phone, the only option you will see in the list is Phone.

Extra Features

All of the features listed in this section are available through the Extra menu on the Smartwatch. To access the Extra menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >> (Forward) button in the bottom left corner of the screen6 times.

Calendar

To access the calendar on your Smartwatch, do the following:

1. Tap the Extra menu.
2. Tap the Calendar option in the bottom left corner of the screen.

   The Options button in the bottom left corner of the screen provides access to the following actions:

   - View — View any events for the date that is selected on the calendar

- View all — View all events for the month that is currently displayed
- Add event — Create an event reminder in the calendar
- Delete event — Delete all event reminders, overdue event reminders, or date-specific event reminders
- Jump to date — Go to a specific date without having to scroll backward or forward through the calendar
- Go to today — Jump back to the current date if you were previously viewing a different date
- Go to weekly view — View each calendar week instead of month
- Start of a week – To change from starting a week on 'Sunday' or 'Monday'

All of the features listed in this section are available through the Extra menu 1 on the Smartwatch. To access the Extra menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.

Calculator

To access the calculator on your Smartwatch, do the following:

1. Tap the Extra menu 1.
2. Tap the 'Organizer' on the top left corner.
3. Tap the 'Calculator' option in the top right corner of the screen.

Files

To access the files on your Smartwatch, do the following:

1. Tap the Extra menu 1.
2. Tap the 'Organizer' on the top left corner.
3. Tap the 'Files manager' option in the top left corner of the screen.
4. You can choose between managing the file on 'Phone' or 'Memory card'
5. You can choose the options of 'Open', 'Format', and 'Details'

Alarm

To set or edit the alarm on your Smartwatch, do the following:

1. Tap the Extra menu 1.
2. Tap the 'Organizer' on the top left corner.
3. Tap the 'Alarm' option in the bottom right corner of the screen.
4. Tap one of the available alarm slot.
1. Tap the #1 field to switch the alarm to On.
2. Tap the #2 field to set or change the alarm time.

3. Tap the #3 field to designate how often the alarm should go off: Once, Every day, or Custom.
4. If you selected Custom in Step 10, designate the days of the week you would like the alarm to go off.
5. Tap the #4 field to designate the alert type you want to use: Vibrate and ring, Ring only, or Vibrate only.
6. Tap 'Done' to save the alarm settings.
7. Tap 'Yes' to confirm that you want to save the settings.
8.

Tasks

To manage tasks on your Smartwatch, do the following:

1. Tap the Extra menu 1
2. Tap the 'Organizer' on the top left corner.
3. Tap the Tasks option on the bottom left corner.

   The 'Add' button in the bottom left corner of the screen provides access to the following actions:

- View — View any tasks that have been entered into the Smartwatch
- Add — Create a task
- Edit — Edit an existing task
- Search — Search for an existing task by time or by subject
- Delete — Delete an existing task
- Delete overdue — Delete an overdue task
- Delete all — Delete all tasks
- Jump to date — Go to a specific date to create or view tasks on that date
- View uncompleted — View all tasks that have not yet been completed
- Send vCalendar — Send the task to your Bluetooth device
- Save as file — Save an existing task as a file

Profiles

List of Profiles

1. Tap the Extra menu 1
2. Tap the 'Organizer' on the top left corner.
3. Tap the 'Profile' option on the top right corner.

The Smartwatch comes with 6 pre-set profiles:

- General

- Silent
- Meeting
- Outdoor
- My style

Customize

Each of the pre-set profiles can be configured to suit your needs by doing the following:

1. Go to Extra menu 1
2. Tap the Profiles menu in the top right corner of the screen.
3. Tap the profile you want to configure.

   Note: If you want to configure the Headset or Bluetooth profile, tap the >> (Forward) button again to access these options.

6. Tap the 'Option' button on the lower right corner.
7. Tap the Customize option.
8. Tap 'Tone settings' to designate the tones you want to hear for incoming calls, alarms, power on and power off actions, message arrivals, and keypad pressing.
9. Tap Volume to designate the volume of the ringtone and of the keys when the keypad is tapped.
10. Tap 'Alert type'to designate whether you want to be alerted to new calls or messages by ringing only, vibrating only, vibrating and then ringing, or vibrating while ringing.
11. Tap 'Ring type' to designate whether you want a single ring, repeated ringing, or ascending ringing (growing louder).
12. (Optional) Tap Extra tone if you want to designate additional instances where tones will be played, such as when the Smartwatch sends a warning or error, when camp on<?> is enabled, or when connecting.
13. Tap Answer mode to designate the action you will take to answer a call.
14. When you have finished, tap 'Back'.
15. If you want the profile you just customized to be the active one, tap the Activate option.

Phone Settings

All of the features listed in this section are available through the Settings menu on the Smartwatch. To access the Settings menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.

3. Tap the >> (Forward) button in the bottom left corner of the screen5 times.

   The 'Settings' menu appears in the bottom left corner of the screen.

Pen Calibration

For details on how to calibrate the touchscreen, refer to Calibrate the Touchscreen in Chapter 2, "First Time Use."

Phone Settings

Time and Date

To set the time and date from the Settings menu, do the following:

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the Time and date option.
4. Tap the Set time/date option.
5. Tap the HH:MM field then use the keypad at the bottom of the screen to enter the current hour and minute using the 24 hour clock (for example, 4:00 p.m. should be entered as 16:00).
6. Tap the YYYY/MM/DD field, then use the keypad at the bottom of the screen to enter the current year, month, and day in the format YYYYMMDD.
7. Tap the Daylight saving field, then select'On' or 'Off' for Daylight savings.
8. Tap 'OK' to save your changes.
9. Tap the Set format option.
10. In the Time field, select either 12 to display the hour as a numbers from 1 through 12 or select 24 to display the hour as a number from 1 through 24.
11. In the Date field, select the date format you want to use: MM DD YYYY, DD MM YYYY, or YYYY MM DD.
12. In the Date separator field, select the separator you want to use between the month, date, and year. You can chose from the following: slash (11/25/2012), hyphen (11-25-2012), period (11.25.2012), or colon (11:25:2012).
13. Tap 'OK' to save your changes.
14. Tap the Update with time zone option to select On or Off. If set to On, the phone will automatically update the time when you enter a new time zone; if set to Off, the phone will not automatically update the time.
15. Tap 'Back' to exit the Time and date options.

Schedule Power On/Off

To schedule a time when you want the Smartwatch to turn on or off automatically, do the following:

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the Schedule power on/off option to see all events: a red icon indicates a Power off event; a green icon indicates a Power on event.
4. Tap the first entry in the list.
5. In the #1 Status field, select Disable to deactivate a scheduled power on/off event or Enable to activate one.
6. In the #2 field, select the type of event you want to create: Power on or Power off.
7. In the #3 field, set the time you want to have the event occur.

Set the Default Language for the Smartwatch

To set the default language for all screens, menus, and options in the Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the Language option to view the list of languages supported by the Smartwatch.
4. Select the new default language you want to use andtap 'OK'.

Set the International Keyboard

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the 'International Keyboard' option to view the list of input methods supported by the Smartwatch.
4. Tap 'Multi language setting' to choose English, Spanish, French, Italian, and Dutch.
5. Tap 'English Setting' to choose 'Auto Space' and 'Auto Capatalisation'

Set the Encoding Type

To set the encoding type used when sending data to other devices using the Smartwatch, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option in the top right corner of the screen.
3. Tap the 'Encoding' option.
4. Tap either 'ASCII' or 'Windows -1252'.
5. Tap 'OK' to save your selection.

Configure the Display Screen

To configure what appears on the Smartwatch display screen, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option in the top right corner of the screen.
3. Tap the 'Display' option and then tap any or all of the following options to configure them:
   - Wallpaper – Allows you to select an image to be used as wallpaper for your Smartwatch display.
   - Screen auto lock – Allows you to set auto lock time: off, 15 secs, 30 secs,1min, 5 min
   - Screen saver – Allows you to select an image that will appear when the Smartwatch display is left idle.
   - Power on display – Allows you to select an image that will appear briefly when the Smartwatch is powering up.
   - Power off display – Allows you to select an image that will appear briefly when the Smartwatch is powering down.
   - Show date and time – Allows you to designate whether you want to have the date and time displayed on the digital Smartwatch face.
   - Clock type – Allow you to select between 'Analogue' and 'Digital'.
4. Tap'Back' when you are done.

Set Auto Update of Date and Time

To turn on or off auto updating of the Smartwatch date and time, do the following:

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the Auto update of date and time option and a small blue popup box will appear displaying the current setting of the option.
4. Tap 'On' or 'Off' to change the status.
5. Tap'Back' when you are done.

Note:
1. The system will update the "Day and time"automatically, if you insert a SIM card which can access to the internet.

Turn On/Off Flight Mode

To turn flight mode on or off for the Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the Flight mode option to see whether it is currently turned on or off.
4. Tap one of the following options:
   - Normal mode This turns flight mode OFF
   - Flight modeThis turns flight mode ON and causes the words "Flight mode" to appear on the digital display.
   - Query when power onThis instructs the Smartwatch to ask you each time you turn it on whether you want the phone to turn on in flight mode. If you do not respond to the prompt, the Smartwatch will automatically go to Normal mode after 10 seconds.

5. Tap 'Back' to save your changes.

UART Setting

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the 'UARTsettings'
4. You can choose between URAT1, URAT 2.

Misc Settings: Configure LCD Backlight

To configure the brightness and display time of the LCD backlight, do the following:

1. Tap the Settings menu.
2. Tap the Phone settings option in the top right corner of the screen.
3. Tap the Misc. settings option.
4. Tap the LCD backlight option.
5. Use the stylus to move the Brightness slider to the left, to dim the display, or to the right, to make it brighter.
6. Use the stylus to move the Time (sec) slider to designate how many seconds the LCD backlight should remain on.
7. Tap'Back' to save your changes.

Net Settings

Network Selection

To configure the Network Selection option, do the following:

1. Tap the Settings menu.
2. Tap the 'Net settings' option in the bottom left corner of the screen.
3. Tap the 'SIM' option.
4. Tap the Network selection option once to set it to Automatic. Tap it again to set it to Select and then make a selection from the list that appears.
5. Tap'Back' to save your changes.

Preferences

To configure the Preferences option, do the following:

1. Tap the Settings menu.
2. Tap the 'SIM' option.
3. Tap the Preferences option.
4. On the screen that appears, tap the name of the network that you want to set as the preferred network in the system.
5. Tap'Back' to exit the screen.
6. Tap 'Back' again to save your changes.

GPRS Connection

To configure the availability of the GPRS connection, do the following:

1. Tap the Settings menu.

2. Tap the Net settings option in the bottom left corner of the screen.
3. Tap the GPRS connection option, you can choose between 'Data prefer', and 'Call Prefer'

Security Settings

The following Security Settings are used to lock down different aspects of your Smartwatch:

- SIM Lock—This PIN number can be gotten from your Service Provider
- Phone Lock—To lock/unlock the phone, enter the default password 1122 or create your own password using the Change Password function in the list.
- Auto Keypad Lock—Use this option to configure the amount of time after which the keypad will automatically lock down.
- APN Control—Use this option to configure the numbers in the APN Control List for your Smartwatch.
- Change Password—Use this option to change the SIM Lock password or the phone password for your Smartwatch.

Call Settings

Caller ID

To configure Caller ID on your Smartwatch, do the following:

1. Tap the 'Settings' menu.
2. Tap the >> (Forward) button.
3. Tap the Call settings option in the top left corner of the screen.
4. Tap the 'SIM call setting'.
5. Tap the Caller ID option in the menu.
6. Tap one of the following options:
   - Set by network
   - Hide ID
   - Send ID
6. Tap'Back' to save your changes.

Call Waiting

To configure Call Waiting on your Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the >> (Forward) button.
3. Tap the Call settings option in the top left corner of the screen.
4. Tap the Call waiting option in the menu.
5. Tap one of the following options:
   - Activate
   - Deactivate
   - Query status
6. Tap'Back' to save your changes.

Call Divert

The Smartwatch gives you the option of diverting incoming calls and sending them directly to your voicemail or to a number specified by you.

To configure Call Divert on your Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the >> (Forward) button.
3. Tap the Call settings option in the top left corner of the screen.
4. Tap the Call divert option in the menu.
5. Each of the following call divert options can be activated**, deactivated, or set to "Query status" by tapping on it:
   - Divert all voice calls
   - Divert if unreachable
   - Divert if no answer
   - Divert if busy
   - Divert all data calls
   - Cancel all diverts

   ** When you select Activate for any of the divert options, you will be prompted to designate whether the number should be diverted directly to your voicemail account or to a different phone number, which you will then enter on the screen.
6. In addition to these five divert options, you can tap the sixth option in the list, Cancel all diverts, to deactivate all of the divert options at once.
7. Tap'Back'to save your changes.

Call Barring

The Call Barring feature differs from the Blacklist feature in that Call Barring allows you to block calls to and from a specific phone number, whereas the Blacklist only blocks incoming calls from a specific number. In order to configure call barring, you will need to know your call barring password, which is usually set to 0000 by default. Aside from the instructions below, you will need to contact your Service Provider to make sure the feature is properly supported.

To configure Call Barring on your Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the >> (Forward) button.
3. Tap the Call settings option in the top left corner of the screen.
4. Tap the Call barring option in the menu.
5. To set up barring for outgoing calls, tap the 'Outgoing calls' option.
6. Each of the following outgoing call options can be activated, deactivated, or set to "Query status" by tapping on it::
   - All calls – This will block users from making any calls on the Smartwatch.
   - International calls – This will block users from making any international calls on the Smartwatch.
   - International calls except to home PLMN – This will block users from making any international calls on the Smartwatch except for calls made to their local public land mobile network (PLMN).

7. Tap the Back button to save your changes.
8. To set up barring for incoming calls, tap the 'Incoming calls' option.
9. Each of the following incoming call options can be activated, deactivated, or set to "Query status" by tapping on it:
   - All calls – This will block all calls made to your Smartwatch.
   - When roaming – This will block all calls made to your Smartwatch when your phone is outside its service area and is in Roaming mode.
10. Tap the Back button to save your changes.
11. To cancel all barring settings on your Smartwatch, tap the Cancel all option.
12. To change your call barring password, tap the Change barring password option.
13. Tap'Back' to save your changes.

Line Switching

To configure line switching on your Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the >> (Forward) button.
3. Tap the Call settings option in the top left corner of the screen.
4. Tap the Line switching option in the menu.

   The Smartwatch will automatically switch to the other line.

5. (Optional) Tap the Line switching option again to switch back to the original.
6. Tap'Back' to save your changes.

Advanced Settings

To configure advanced settings on your Smartwatch, do the following:

1. Tap the Settings menu.
2. Tap the >> (Forward) button.
3. Tap the Call settings option in the top left corner of the screen.
4. Tap the Advance settings option in the menu.
5. The menu that appears provides access to the following features:
   - Blacklist – Turn the blacklist on or off and add telephone numbers to it.
     Note: To view the numbers that have already been added to your blacklist, tap this option, tap the 2 option and then use the up and down arrows to view each blacklisted number.
   - Auto redial – Turn auto redial on or off.
   - IP dial – Create fixed IP dial numbers for specific contacts that you always want to call using an IP number instead of a regular telephone number.

- Call time display – Show or hide the call timer on the Smartwatch display field.
- Call time reminder – Turn on or off call time messages that appear at the end of each phone call you make. You can set the Call time reminder to display after every call (Single), after a specified number of phone minutes have been used (Periodic), or not at all (Off).
- Auto quick end – Used to limit call times. When the length of a call reaches the time limit designated in the setting, the call ends automatically.

6. When you are done configuring the advanced settings, tap'Back' to save your changes.

Reset Factory Settings

To reset your Smartwatch so that all of your settings are replaced by the default settings that were in place when the Smartwatch was new, do the following:

1. Tap the Settings menu.
2. Tap the >> (Forward) button again.
3. Tap the Res settings option in the top right corner of the screen.
4. Use the stylus to tap out your Smartwatch password'1122'.

   Note: This is a security feature that prevents unauthorized users from erasing all of your settings without your permission.

5. Tap 'Yes' to confirm that you want to reset the Smartwatch to its factory settings.

Services

All of the features listed in this section are available through the Services menu on the Smartwatch. To access the Services menu, do the following:

1. Tap the default (analog) watch display.
2. On the digital watch display that appears, tap the (Menu) button.
3. Tap the >> (Forward) button in the bottom left corner of the screen 6 times

   The Services menu appears in the bottom right corner of the screen.

Internet Service

To set up and view internet services on the Smartwatch, do the following:

1. Tap the Services menu.
2. Tap the Internet service option in the menu.

   The following services are available:

   - Homepage— Tap this option to go to the internet homepage you have designated previously. If you have not yet set a homepage, the browser will display automatically display the Yahoo.com page.
   - Bookmarks — Tap this option to access your bookmarks.
   - Search or input URL— Tap this option to enter an internet address, such as www.burgsmartwatch.com.
   - Recent Pages — Tap this option to view a list of the internet sites you have viewed recently.
   - Settings — Tap this option to access the different internet settings you can configure for your Smartwatch. Details on each of these settings are provided immediately below.

Data Account

To view, add, edit, or delete a data account for internet services on the Smartwatch, do the following:

1. Tap the Services menu.
2. Tap the Data account option in the menu.
3. Select the type of account you want to use from the list of providers OR click the Options button and enter a new provider manually.

Specification

FEATURES	Internal Memory External Memory 2G Network	 128Mbits Storage / 64Mbits RAM MicroSD, up to 16GB 850/900/1800/1900 MHZ
BODY	Dimensions Weight	55.25 x 41.15x 14.53 mm 75 grams
DISPLAY	Type Size Color Touch screen	TFT 1.54 Inches 262K Color Yes
SOUND	Alert Types Loudspeaker Micro USB 2.0 Max. output voltage	 Vibration, MP3, MP4 Yes Yes ≤150 mV
DATA	 GPRS Bluetooth USB	Yes 3.0 +EDR charging and data transfer
Multimedia	Supported memory card Music support MP3 Ringtone FM Radio Stero Speaker	Max. 16GB Micro SD/T-Flash (Not included) MP3 Yes Yes Yes
Battery Connection	Type Capacity Talk Time Standby Compatible Operating System Interface	Lithium-polymer 300 mAh 2Hr 45min 142 Hours Windows® XP/Vista™/7/8 Micro USB 2.0